ISANTA MEMBER

CE

DFPXP

20 Ga. 1/2" Crown Clinching Stapler



Parts Reference Guide

Guía de referencia de piezas

Pièces Guide de référence

Schematic Drawings Inside
Plano esquemático en el interior
Schéma intérieur

SENCO®

Senco Brands, Inc.
4270 Ivy Pointe Blvd.
Cincinnati, OH 45245
1-800-543-4596
www.senco.com


NFG08H • Revised March 26, 2014

Questions? Comments? call SENCO's toll-free Action-Line: 1-800-543-4596 (North and South America Only) or email: toolprof@senco.com

¿Tiene preguntas? ¿Comentarios? Llame a la línea gratuita de acción de Senco: 1-800-543-4596 (sólo para América del Norte y del Sur) o envíe un correo electrónico: toolprof@senco.com


Des questions? Des commentaires? Communiquez avec le service d'assistance sans frais de Senco : 1-800-543-4596 (Amérique du Nord et Amérique du Sud seulement) ou envoyer un courriel: toolprof@senco.com

SENCO®

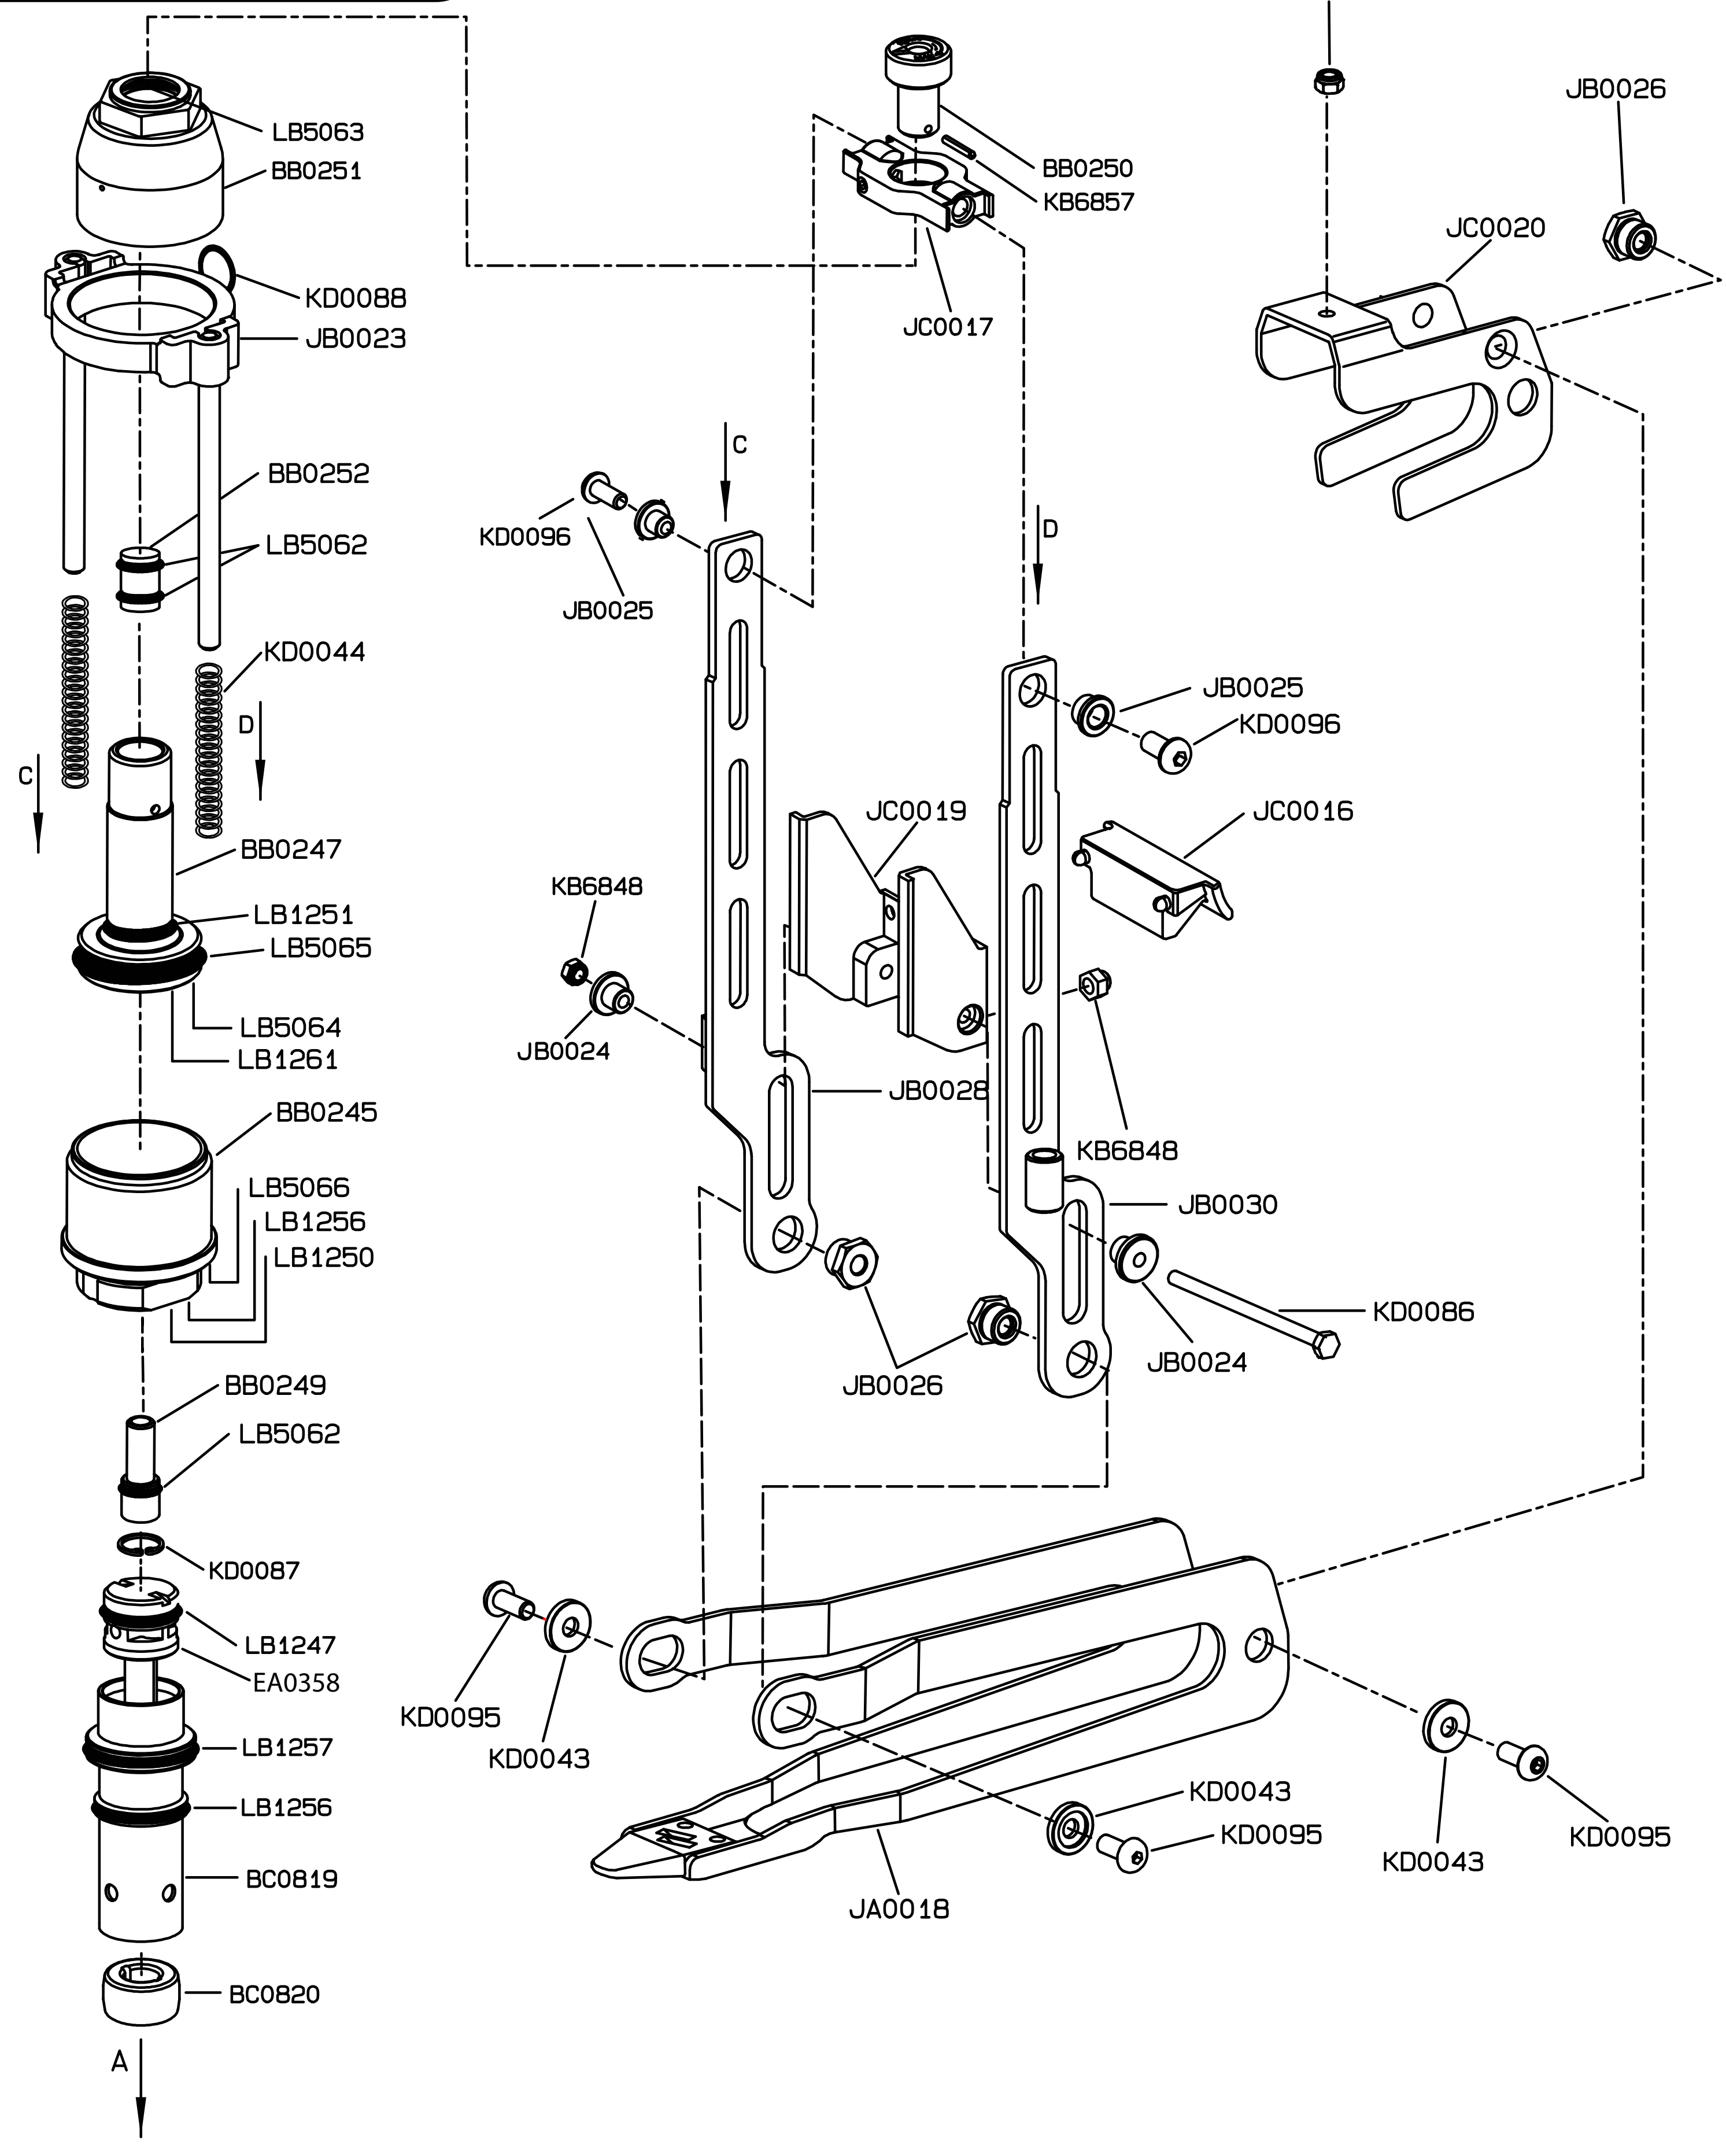

LB5063
BB0251
KD0088
JB0023
BB0252
LB5062
KD0044
C
D
BB0247
LB1251
LB5065
LB5064
LB1261
BB0245
LB5066
LB1256
LB1250
BB0249
LB5062
KD0087
LB1247
EA0358
LB1257
LB1256
BC0819
BC0820
A
BB0250
KB6857
JC0017
C
KD0096
JB0025
D
JB0025
KD0096
JC0019
JC0016
KB6848
JB0024
JB0028
KB6848
JB0030
KD0086
JB0024
JB0026
KB6848
JB0026
JC0020
KD0095
KD0043
KD0043
KD0095
KD0043
KD0095
JA0018

20 Ga. 1/2" Crown Clinching Stapler DFPXP

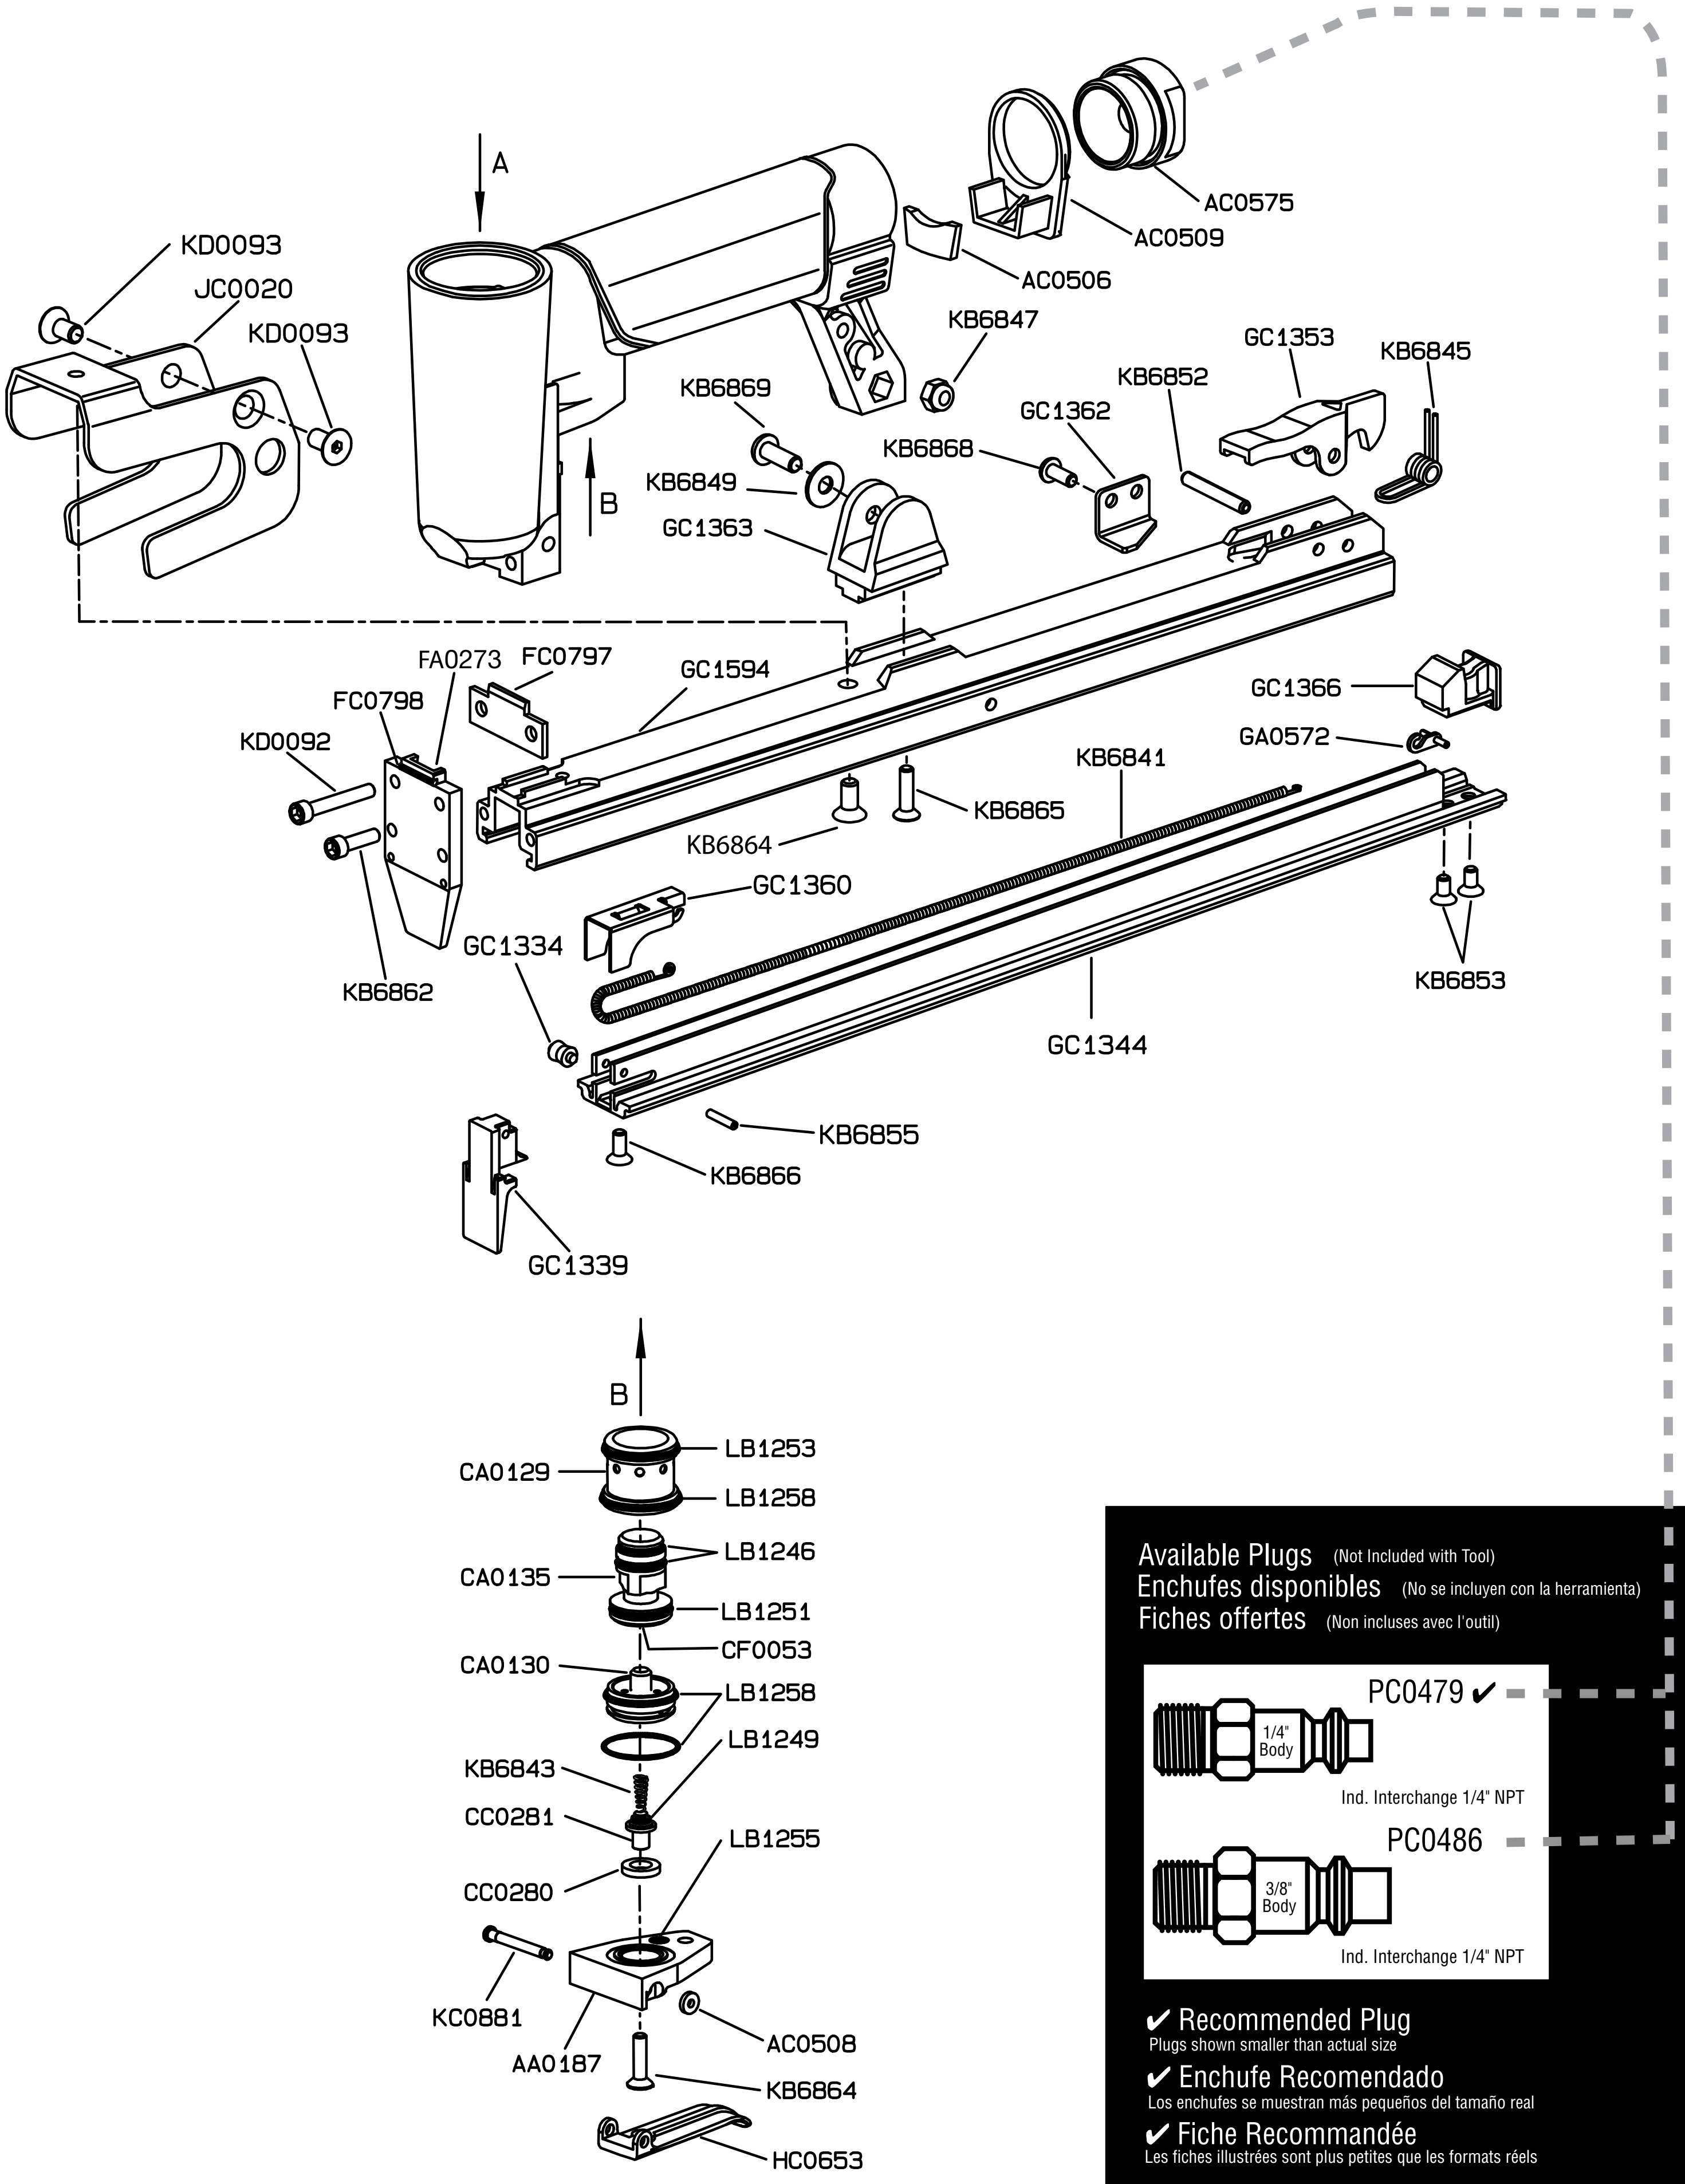

SENCO®

20 Ga. 1/2" Crown Clinching Stapler

DFPXP

REPLACEMENT PARTS LIST • LISTA DE PARTES DE REPUESTO • LISTE DE PIÈCES DE RECHANGE

PART NO.	DESCRIPTION	DESCRIPCIÓN	DÉSIGNATION
AA0187	TRIGGER PLATE CPL.	PLACA DE GATILLO	PLAQUE DE GÂCHETTE
AC0506	SILENCER	SILENCIADOR	SILENCIEUX
AC0508	RETAINER	JUNTA TÓRICA	RETENUE
AC0509	SILENCER CAP	TAPA	BOUCHON
AC0575	END CAP	TAPA	BOUCHON
BB0245	BODY	CARCASA	CORPS
BB0247	JAW PISTON	CILINDRO	CYLINDRE
BB0249	PISTON	PISTON	PISTON
BB0250	ADJUSTER	AMORTIGUADOR	AMORTISSEUR
BB0251	CAP	TAPA	BOUCHON
BB0252	COVER	CUBIERTA	COUVERCLE
BC0819	CYLINDER	CILINDRO	CYLINDRE
BC0820	BUMPER	TOPE	ARRÊT
CA0129	BUSHING	CASQUILLO	DOUILLE
CA0130	TRIGGER	GATILLO	GÂCHETTE
CA0135	VALVE PISTON CPL.	VALVULA	VALVE
CC0280	SEAL	SELLO	JOINT
CC0281	REMOTE STEM	STEM REMOTO	STEM REMOTE
CF0053	BUFFER	TOPE	TAMPON
EA0358	DRIVER PISTON	PISTON	PISTON
FA0273	DRIVER PLATE	PLACA	PLAQUE
FC0797	PLATE	PLACA	PLAQUE
FC0798	SEAL	SELLO	JOINT
GA0572	HOOK	GANCHO	CROCHET
GC1334	ROLLER	RODILLO	ROULEAU
GC1339	PLATE	PLACA	PLAQUE
GC1344	RAIL	CARRIL	RAIL
GC1353	LATCH	PESTILLO	LOQUET
GC1360	FEEDER	ALIMENTADOR	CHARGEUR
GC1362	STOP	TOPE	ARRÊT
GC1363	BRACKET	SOPORTE	SUPPORT
GC1366	LATCH	PESTILLO	LOQUET
GC1594	LOADER	CARGADOR	MAGASIN
HC0653	TRIGGER	GATILLO	GÂCHETTE
JA0018	ANVIL (JAW)	YUNQUE	ENCLUME
JB0023	JAW RING	ANILLO	ANNEAU
JB0024	BUSHING	CASQUILLO	DOUILLE
JB0025	BUSHING	CASQUILLO	DOUILLE
JB0026	BUSHING	CASQUILLO	DOUILLE
JB0028	RIGHT PLATE	PLACA	PLAQUE
JB0030	LEFT PLATE	PLACA	PLAQUE
JC0016	GUARD	DEFENSA	PROTECTION
JC0017	YOKE	HORQUILLA	ÉTRIER
JC0019	YOKE	HORQUILLA	ÉTRIER
JC0020	YOKE	HORQUILLA	ÉTRIER
KB6841	SPRING	RESORTE	RESSORT
KB6843	SPRING	RESORTE	RESSORT
KB6845	SPRING	RESORTE	RESSORT
KB6847	NUT	TUERCA	ÉCROU
KB6848	NUT	TUERCA	ÉCROU
KB6849	WASHER	ARANDELA	RONDELLE
KB6852	PIN	PASADOR	GOUPILLE
KB6853	SCREW	TORNILLO	VIS
KB6855	PIN	PASADOR	GOUPILLE
KB6857	PIN	PASADOR	GOUPILLE
KB6862	SCREW	TORNILLO	VIS
KB6864	SCREW	TORNILLO	VIS
KB6865	SCREW	TORNILLO	VIS
KB6866	SCREW	TORNILLO	VIS
KB6868	SCREW	TORNILLO	VIS
KB6869	SCREW	TORNILLO	VIS
KC0881	PIN	PASADOR	GOUPILLE
KD0043	BUSHING	CASQUILLO	DOUILLE
KD0044	SPRING	RESORTE	RESSORT
KD0086	SCREW	TORNILLO	VIS
KD0087	STOP RING	ANILLO	ANNEAU
KD0088	RING	ANILLO	ANNEAU
KD0092	SCREW	TORNILLO	VIS
KD0093	SCREW	TORNILLO	VIS
KD0095	SCREW	TORNILLO	VIS
KD0096	SCREW	TORNILLO	VIS
LB1246	SEAL	SELLO	JOINT
LB1247	SEAL	SELLO	JOINT
LB1249	SEAL	SELLO	JOINT
LB1250	SEAL	SELLO	JOINT
LB1251	SEAL	SELLO	JOINT
LB1253	SEAL	SELLO	JOINT
LB1255	SEAL	SELLO	JOINT
LB1256	SEAL	SELLO	JOINT
LB1257	SEAL	SELLO	JOINT
LB1258	SEAL	SELLO	JOINT
LB1261	SEAL	SELLO	JOINT
LB5062	SEAL	SELLO	JOINT
LB5063	SEAL	SELLO	JOINT
LB5064	SEAL	SELLO	JOINT
LB5065	SEAL	SELLO	JOINT
LB5066	SEAL	SELLO	JOINT